



1884115


O-Soho Hall Chest

Parts List

A. Top Assembly	1 pc
B. Front Legs	2 pcs
C. Back Legs	2 pcs
D. Allen Head Bolts	8 pcs
E. Lock Washers	8 pcs
F. Flat Washers	8 pcs
G. Drawer Stoppers	8 pcs
H. Allen Head Wrench	1 pc
I. Phillips Head Screwdriver	1 pc
J. Optional Allen Head Bit	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.


Hardware Illustrations

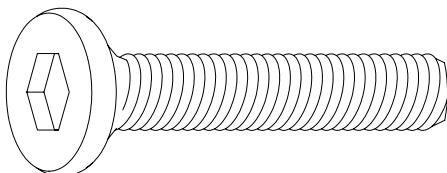


D. Allen Head Bolt



E. Lock Washer

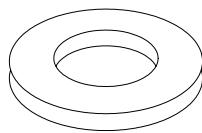

F. Flat Washer



G. Drawer Stopper

BOMBAY



OUTLET

1884115

O-Soho Hall Chest

Assembly Instructions

- Attach Front & Back Legs (B, C)** Remove the left & right drawers from Top Assembly (A). Put Top Assembly (A) upside down on a soft surface. Align the pre-threaded holes Front & Back Legs (B, C) with the pre-drilled holes in corner blocks of Top Assembly (A). Secure with Allen Head Bolts (D), Locker Washers (E) and Flat Washers (F) using Allen Head Tool (H or J). See illustration #1.
- Attach Drawer Stoppers (G)** Partially insert the drawers into the Top Assembly (A). Align the exposed threads of Drawer Stoppers (G) with the pre-drilled holes in the side panels of drawers. Tighten by turning in a clockwise direction using Phillips Head Screwdriver (I). See illustration #2.

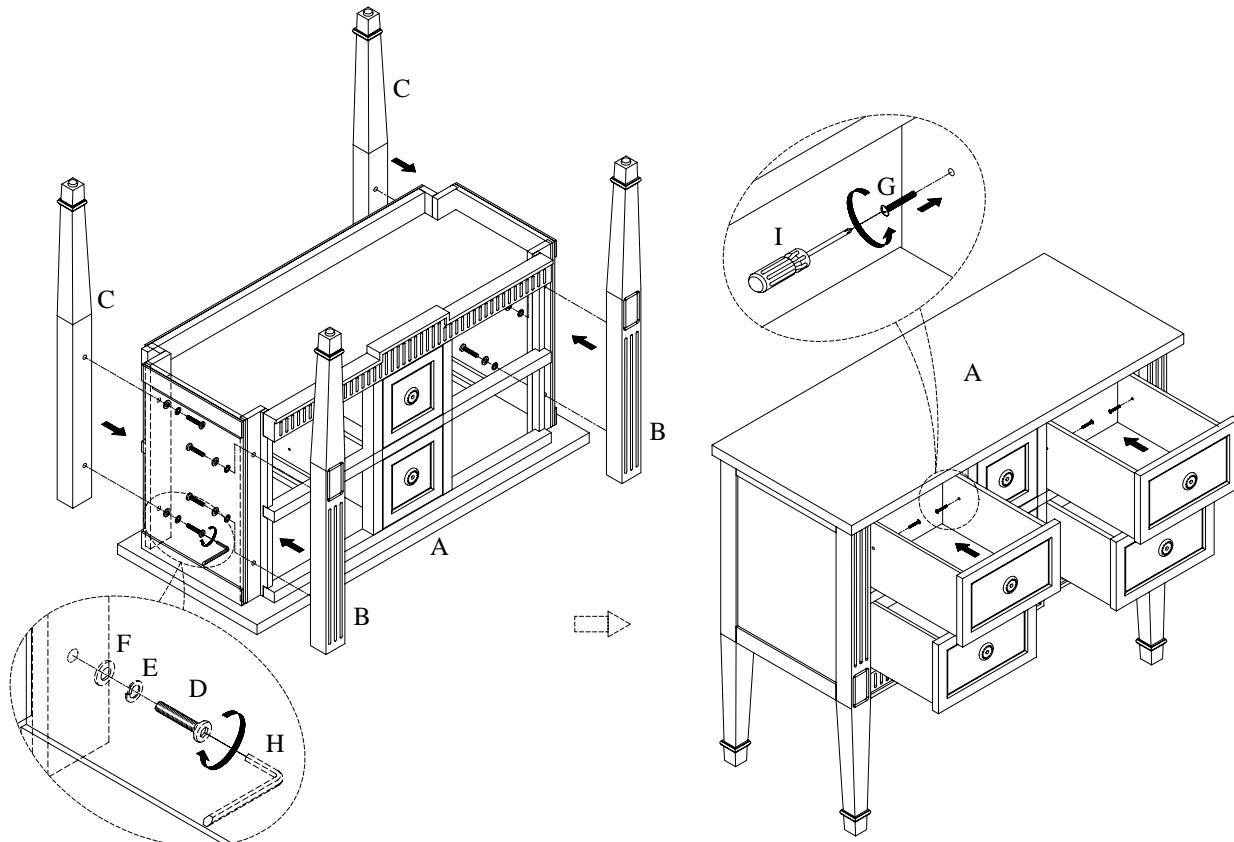


Illustration #1

Illustration #2